



3BM-3TFM TNC to Triax BNC

Converts a triax BNC electrometer input to TNC. Used to connect an NE TNC terminated ion chamber to a CNMC, Victoreen, or Keithley electrometer. Male BNC, female TNC with a threaded ring.



3BFFC Triax BNC, female/female

Converts triax BNC male to triax BNC female. Both ends are identical; female insert with two lugs.



3BMMC Triax BNC, male/male

Converts female BNC connector on a 30-404 Memorial chamber or early Capintec PR-o6C to a triax male for use with a triax BNC extension cable. Both ends are identical, having male insert with a two-slot body.



3BF-3TMF Triax BNC to TNC

Converts a TNC electrometer input to triax BNC. Used to connect a triax BNC terminated ion chamber to a Capintec, NE, or Wellhöfer electrometer. Female BNC, male TNC with threaded ring.



3BM-2BF Triax BNC to Coax BNC

Converts a triax BNC electrometer input to a coax BNC. Allows connection of a coax-terminated diode detector to a CNMC, Victoreen or Keithley electrometer. The electrometer bias should be disabled to avoid electrical shock hazard. Male triax, female coax.



2BFFPC Coax BNC, female/female

Converts coax BNC male to coax BNC female, for panel mount feed-through applications. Both ends are identical.

2BFFC Coax BNC, male/female

Converts coax BNC male to coax BNC female, for in-line applications. Both ends are identical.



3BFFPC Triax BNC, female/female

Converts triax BNC male to triax BNC female. It can be mounted to a wall panel as a feed-through in conduit cable installations. Both ends are identical; female insert with two lugs.



3BM-3TFF TNC to Triax BNC

Converts a Capintec or old-style Wellhöfer TNC terminated ion chamber to a triax BNC male for use with a triax BNC extension cable. Male BNC, female TNC with threaded body. (Not available in a single piece adaptor.)